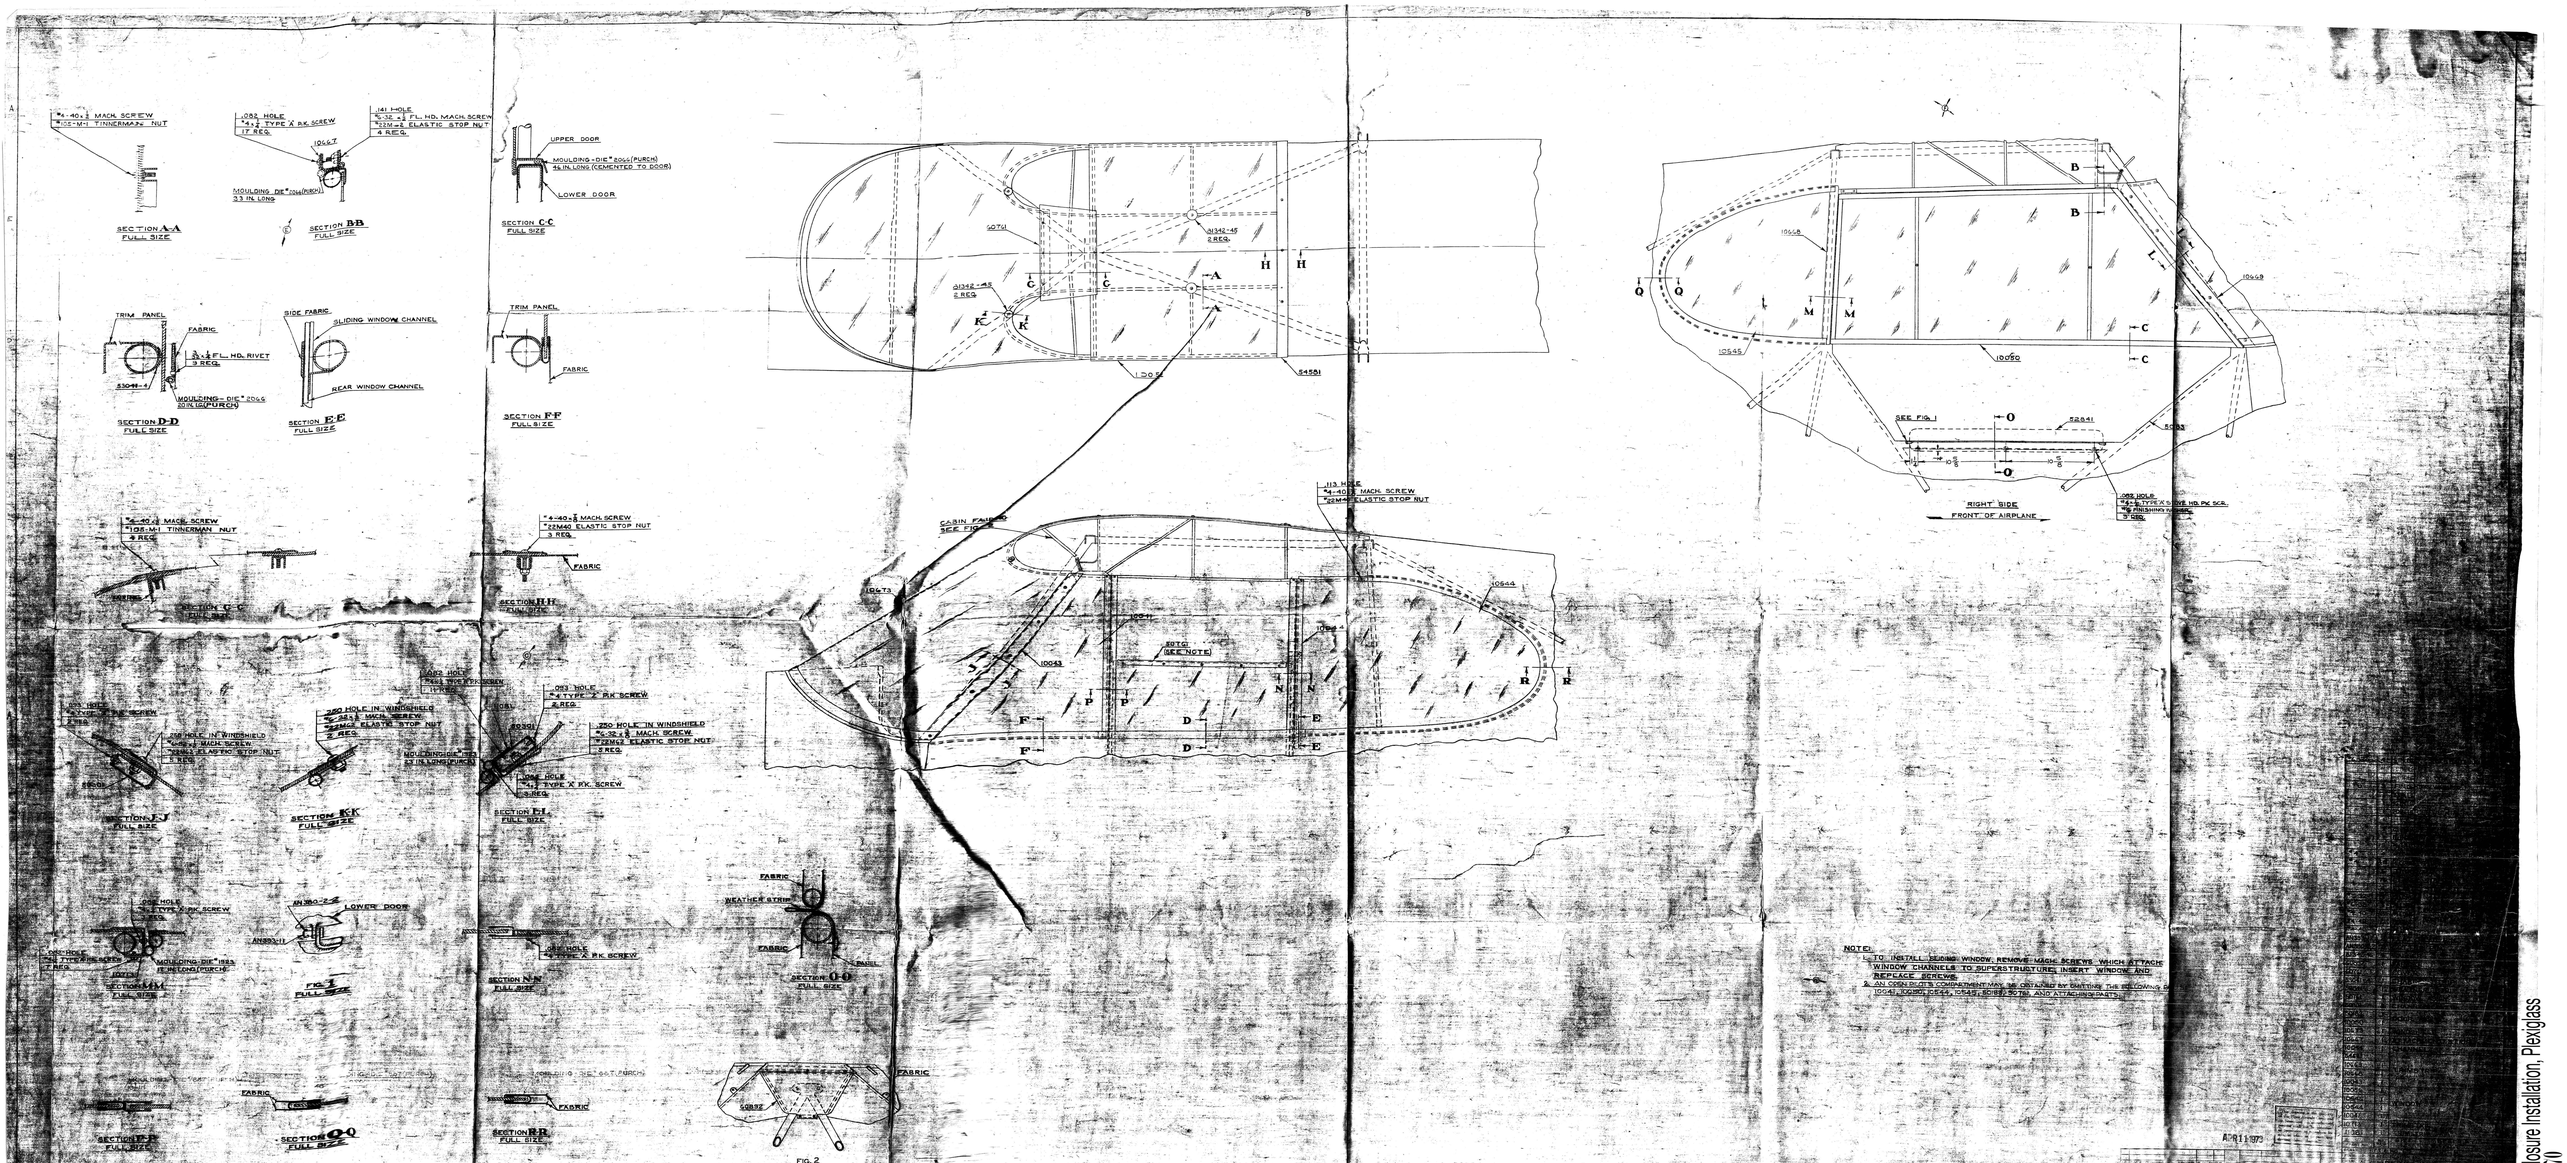
SECTION A-A FULL SIZE
SECTION BB FULL SIZE
SECTION C-C FULL SIZE
SECTION D-D FULL SIZE
SECTION E-E FULL SIZE
SECTION F-F FULL SIZE
SECTION G-G FULL SIZE
SECTION H-H FULL SIZE
SECTION J-J FULL SIZE
SECTION K-K FULL SIZE
SECTION L-L FULL SIZE
SECTION M-M FULL SIZE
SECTION N-N FULL SIZE
SECTION P-P FULL SIZE
SECTION Q-Q FULL SIZE
SECTION R-R FULL SIZE
FIG. 1 FULL SIZE
FIG. 2
RIGHT SIDE
FRONT OF AIRPLANE
NOTE:
1. TO INSTALL SLIDING WINDOW, REMOVE MACH SCREWS WHICH ATTACHES WINDOW CHANNELS TO SUPERSTRUCTURE, INSERT WINDOW AND REPLACE SCREWS.
2. AN OPEN DUCT COMPARTMENT MAY BE OBTAINED BY OMITTING THE FOLLOWING PARTS: 10041, 10042, 10043, 10044, 10045, 10046, 10047, AND ATTACHING PARTS.
APRIL 1973

Enclosure Installation, Plexiglass
10611